


Local Manual Actuator

The local manual actuator is used to mechanically operate the tank. To prevent accidental actuation, the actuator contains a steel safety pin. The pin must be removed to operate the actuator. The actuator is operated by depressing the strike button.

The actuator can be mounted either on the top port of the tank valve or on top of the electric solenoid valve.

| Component | Material | Approvals |
|-----------------------|--|--|
| Local Manual Actuator | Body: Brass Safety Pin: Steel Actuation Pin: Stainless Steel | UL Listed ULC Listed FM Approved |

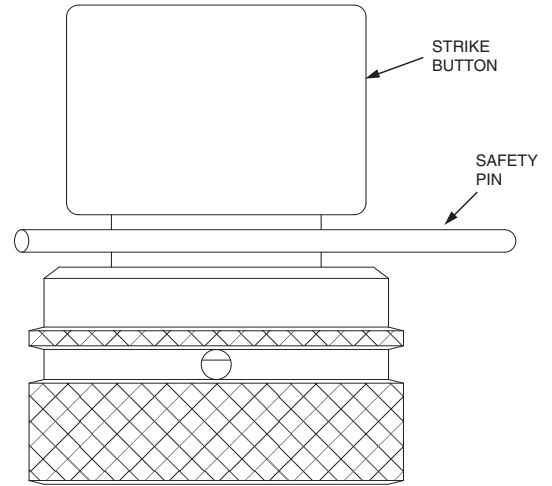

006890

| Shipping Assembly Part No. | Description |
|----------------------------|-----------------------|
| 570549 | Local Manual Actuator |