
See PPHire.

The pneumatic actuator is required to pneumatically actuate the agent tanks. The actuator operates from pressure received from the nitrogen cartridge located in the ANSUL AUTOMAN II-C release. When the pneumatic actuator is pressurized, the internal actuator piston pushes down on the valve stem, opening the tank valve, allowing the agent to discharge.

Component	Material	Approvals
Pneumatic Actuator	Brass	UL Listed ULC Listed FM Approved

Shipping Assembly Part No.	Description
570550	Pneumatic Actuator

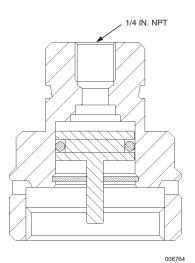



ANSUL and SAPPHIRE are trademarks of Ansul Incorporated or its affiliates.