Fenwal Phoenix

Switch-In Gauge, Supervisory Pressure Switch for Nitrogen P/N: 06-118328-001



A UTC Fire & Security Company

F-93-116

FEATURES

- Factory Installed
- Integrated Pressure Switch and Gauge
- Compact Design
- Steel Braided Tether with Connector Included
- UL Listed for use with Fenwal Protection Systems Nitrogen Pilot Cylinders, Siren Driver Cylinders and Phoenix Nitrogen Driver Cylinders

DESCRIPTION

The Switch-in-Gauge unit is a cylinder contents gauge and supervisory pressure switch integrated into a single package. The unit is factory installed and is supplied complete with a removable 4-conductor tether, which connects to a flexible junction on the back of the gauge body. The tether is protected by a stainless steel overbraid. Heat shrink sleeve is pre-installed on the finished end of the tether. A unformed sleeve is also included for the connection to the system wiring.

Connected to an appropriate control panel the unit initiates an alarm or fault condition when the pressure within the nitrogen cylinder is outside of the standard operating range.

OPERATION

The Switch-In-Gauge contains a NO (Normally Open) switch that is CLOSED when the cylinder assembly is properly pressurized. When connected to a monitored circuit of a suppression control panel, with a correctly rated EOL (end of line) resistor, a deviation from normal operating pressure results in fault or alarm condition.

The Switch-in-Gauge unit is designed to trip when the pressure in the container drops to the level equivalent to the pressure at the lowest permissible operating temperature. The unit also provides a switch response when the container pressure exceeds the level equivalent to the pressure at the highest permissible operating temperature. In addition the unit will trip if power is lost (regardless of the container pressure).

Note: An indication of a fault is not necessarily an indication of a loss of pressure—all cylinder pressure readings must be corrected for temperature.



INSTALLATION



Switch-in-Gauge units (as with standard contents gauges) must not be removed or installed while a container is pressurized. Switch-in-Gauge units are factory installed only. Attempting to remove any container gauge from a pressurized container could result in the rapid release of contents which may cause death, serious injury or property damage.

The Switch-in-Gauge unit is factory installed on the cylinder valve, however the unit must be wired to a supervisory circuit and auxiliary power circuit of a Fenwal Protection Systems control panel in order to obtain full functionality. Without an electrical connection the unit provides visual indication of the pressure within the container.

For the switch to function, allowing supervision of the container, the unit must be supplied power from the auxiliary power circuit via the red and black wires in the supplied tether. The non-polarity sensitive switched connection is made via the blue and brown wires to the supervised circuit of a control panel.

Connection into the control system wiring should be made in a suitable junction box using appropriate gauge wiring per NFPA 72: 1999.

MAINTENANCE (MECHANICAL)

The unit and wiring tether should be checked visually during regular maintenance intervals for damage, corrosion or dial obscuration. No field calibration is possible or necessary.

Description

Gauge Unit and Tether

ORDERING INFORMATION

Part Number

06-118328-001

SPECIFICATIONS

Factory Set Point:	
Low:	1623 PSI (112 bar)
High:	2062 PSI (142 bar)
Contact Rating:	30 Vdc MAX
	100mA MAX
	65ohms (closed) MAX
Wire Color Coding:	
Red:	Positive (24 Vdc nominal)
Black:	Negative
Brown/Blue:	Switch contacts
Switch Operation:	NC, CLOSED under normal
	operating pressure
	NO, OPEN when under/over-
	pressurized
	NO, when power lost
Power Requirements:	18 Vdc to 30 Vdc
	Current draw in normal
	pressure state = 16 ma
	Current draw in low pressure state = 7 ma
Container Connection:	0.125-27 NPT (male)
Wetted Materials:	Brass body, stainless steel
	working tube
Lead Length:	36 in. (914 mm) nominal

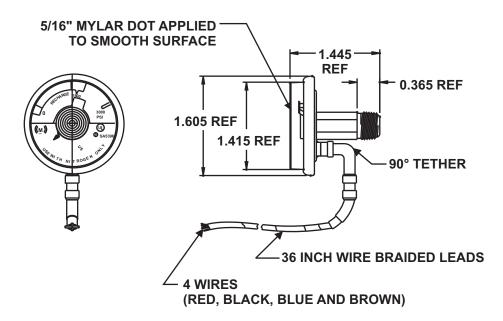


Figure 1. Switch-in-Gauge Dimensions

This literature is provided for informational purposes only. KIDDE-FENWAL, INC. assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to work correctly. If you need more information on this product, or if you have a particular question, contact KIDDE-FENWAL, INC., Ashland, MA 01721. Telephone: (508) 881-2000.



A UTC Fire & Security Company 400 Main Street Ashland, MA 01721 Ph: 508.881.3920 Fax: 508.881.3920 www.fenyadifice.com