

CO₂ Component Description




A UTC Fire & Security Company

Carbon Dioxide Cylinder Weighing Scale

Effective: February 2007
K-81-9090

P/N 982505

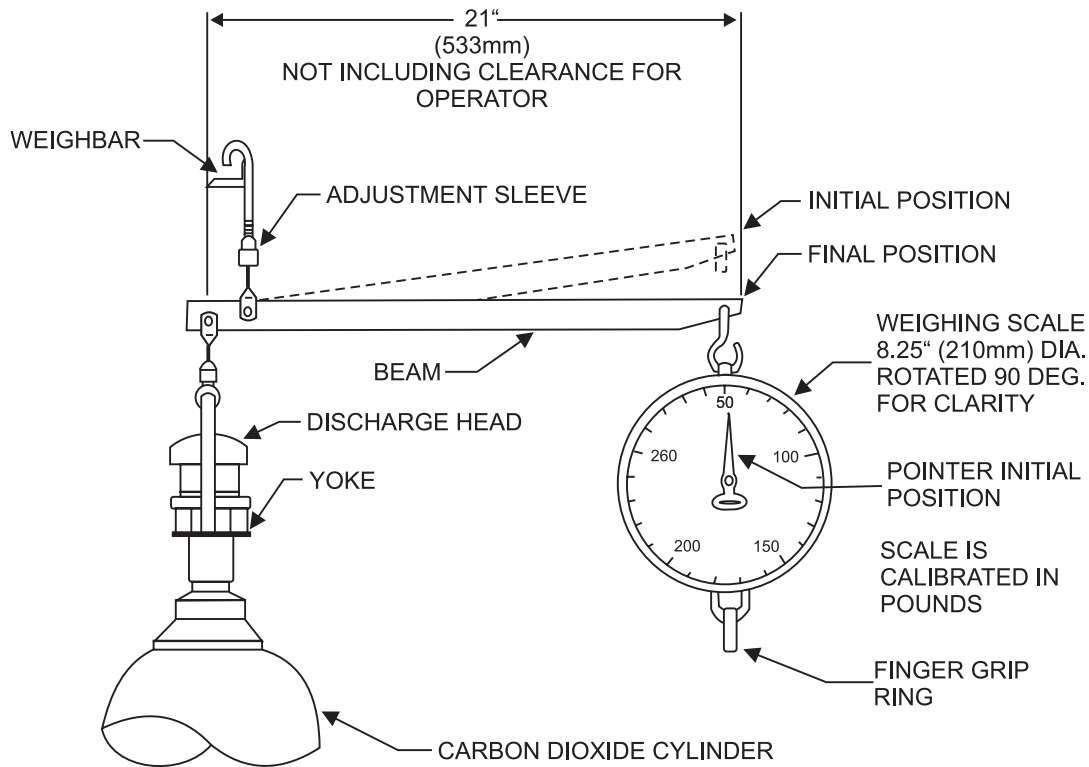

TO WEIGH CYLINDERS: REMOVE CONTROL HEAD, IF USED. LOOSEN CYLINDER FROM FRAMING. HANG HOOK ON WEIGHBAR. PLACE YOKE UNDER DISCHARGE HEAD. USE ADJUSTMENT SLEEVE TO BRING BEAM TO INITIAL POSITION. PULL DOWN ON FINGER GRIP RING UNTIL BEAM IS IN FINAL POSITION. READ WEIGHT ON WEIGHING SCALE. DEDUCT 3.75 LBS. FOR DISCHARGE HEAD ALLOWANCE. RESULT IS WEIGHT OF CYLINDER.

This literature is provided for informational purposes only. KIDDE-FENWAL, INC. assumes no responsibility for the product's suitability for a particular application. The product must be properly applied to work correctly. If you need more information on this product, or if you have a particular problem or question, contact KIDDE-FENWAL, INC., Ashland, MA 01721. Telephone: (508) 881-2000.