

Technical Data Sheet TD5050

Machinery Valve NS 12 Quick Release (Latching) @




Stock codes D01500 & D01510

TA

03 Oct 2002

Stock	Valve type	A [mm]	B [mm]	C [mm]	D [mm]	Water pipe O.D. [mm]	
code						Inlet	Outlet
D01500	SVQ 12-ANN-S12/12-10	~229	~178	50,0	52,0	12,0	12,0
D01510	SVQ 12-ANN-S16/16-10	~236	~185	53,0	53,6	16,0	16,0

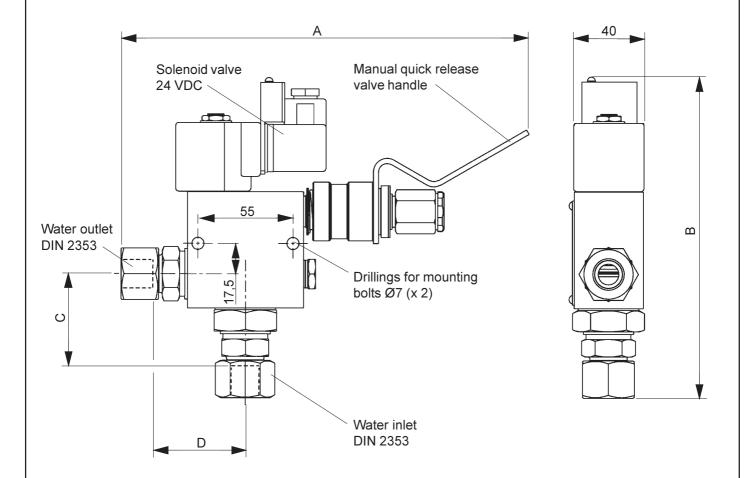

Description:

Machinery space valve is used to control the spray head system activation. In the case of fire, the machinery space valve is opened by the remote operated solenoid or by lifting the manual quick release

Once released, the machinery space valve is latched open. The manual quick release valve will only reset to closed position when the water pressure in the machinery valve decreases to 0 (no pressure).

General	Body material	Brass, nickel plated	
	Connections	Cutting ring DIN2353	
	Valve function	Normally closed (electric circuit to solenoid valve is open	
		and manual quick release valve is in normal position)	
	Mass (both versions)	~2,4 kg	
	Max. pressure	200 bar	



Marioff Corporation Oy, P.O. Box 86, Virnatie 3, FIN-01301 Vantaa, Finland, tel +358 9 870 851, fax +358 9 8708 5399, e-mail info@marioff.fi, www.hi-fog.com